 




**SB7-CC45**


Emergency push button spring return

NO+NC



Red

SB7-CC45

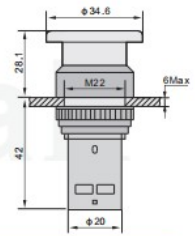

**SB7-CS545**

Emergency push button turn to release

NO+NC



Red

SB7-CS545

